
ASCO™ MINIATURE SOLENOID VALVES

GENERAL SERVICE VALVES

- Series 090 solenoid valves are designed for use with air and inert gases
- Flow to size ratio ideal for portable oxygen therapy applications
- Compact light-weight architecture and low power consumption make them ideal for portable medical devices
- Exceptional service lifetime over 50 million cycles that increases OEM instrument reliability
- Meets all relevant CE directives, and is RoHS compliant
- Typical applications include:
 - Oxygen Delivery
 - Compression Therapy
 - Gas Analyzers






Fluids*	Temperature Range	Seal Materials*		
Air or Inert Gas ¹	0 °C to 60 °C (32 °F to 140 °F)	FKM		

NOTE: Additional constructions and options are available including alternate elastomers and orifice sizes. Minimum quantities apply.


General Valve Information			
Body	PBT		
Others	Stainless Steel		
Response Time	< 15ms		
Vacuum Rating	-0.9 bar (13 psi)		

Electrical Characteristics					
Duty Cycle	Intermittent, must use spike and hold noted below				
Spike and Hold	Spike at nominal voltage for 500 – 5000 ms max. Hold at 50% of nominal voltage.				
Connector	Lead wires				
Connector Specification	28 AWG PVC insulated				
Standard Voltages*	12 VDC, 24 VDC				
Power Rating	4.3 W Inrush, 1.0 W Hold				

^{*} Other voltages on request



地址:中国·青岛市重庆南路99号海尔云街甲3号楼7F

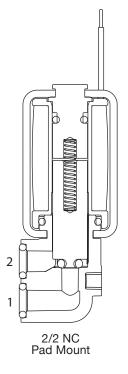

Specifications									
Connection	Orifice Size	Flow Coefficient		Operating Pressure bar (psi)		Power Rating		Catalog Number	
		Oceni	Cicit	min.	max.	(W)		Catalog Number	
	mm (inches)	Kv (m3/h)	Cv		Air, inert gas	Inrush	Hold		
2/2 NC - Normally Closed									
Pad Mount, PBT (F)	2.4 (0.093)	0.183	0.072	-0.9 (-13)	1.4 (20)	4.3	1.0	R090x220LAV00Fx	

01096GB-2019-R01

Email: sales@bechinas.com

网址:http://www.asco.store


Availability, design and specifications are subject to change without notice. All rights reserved. 服务热线:4006-918-365 青岛秉诚自动化设备有限公司

¹ filtered at 10µm
* Ensure that the compatibility of the materials in contact with the fluids is verified.

ASCO™ MINIATURE SOLENOID VALVES

GENERAL SERVICE VALVES

How to Order

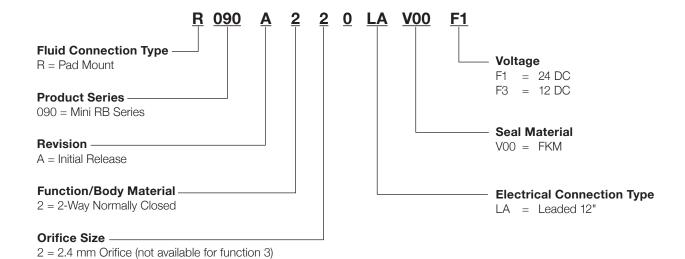

Options

- Other seal materials available on request
- Other voltages and electrical connections available
- Oxygen service

Installation

· The solenoid valves can be mounted in any position without affecting operation.


ASCO


网址:http://www.asco.store


GENERAL SERVICE VALVES


Dimensions: mm (inches)

2-Way and Pad Mount Solenoid Valve

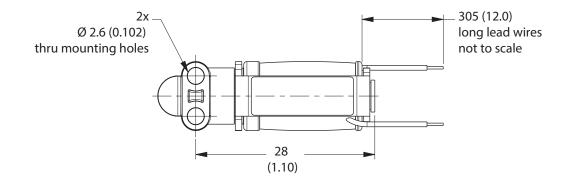

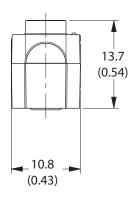

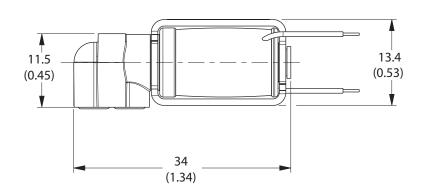

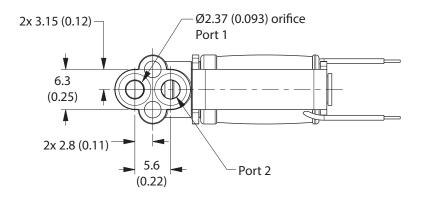

01096GB-2019-R01

EMERSON 传真:(86-532)585-10-365

Email: sales@bechinas.com

服务热线:4006-918-365


网址:http://www.asco.store

ASCO™ MINIATURE SOLENOID VALVES

GENERAL SERVICE VALVES

Dimensions: mm (inches)

Mounting Pattern for Pad Mount Solenoid Valve

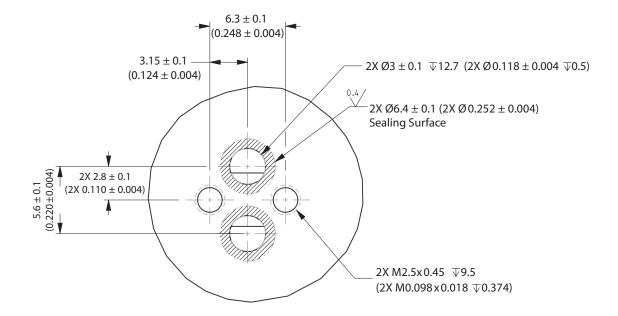

Visit our website at emerson.com

传真:(86-532)585-10-365

Email: sales@bechinas.com